

F16.2

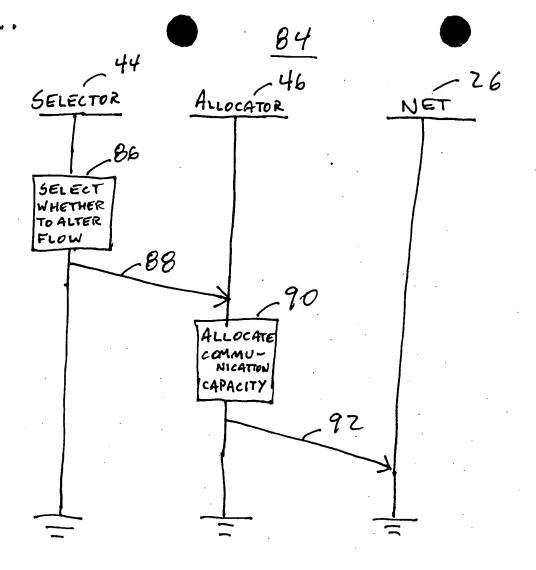


FIG.3

96
MONITOR INDICATION
UPON AIR LINK.
OFON HIR LINK.
100
SELECT WHETHER TO
ALTER THE PACKET
DATA FLOW ON THE COMMUNICATION LINK
102
V
SELECTABLY ALLOCATE,
OR REALLOCATE,
CAPACITY UPONTHE COMMUNICATION LINK

F16. 4